

Edge Trims

Step by step guide on installing Rubber Roofing edge-trims to your next EPDM Roofing project.



Step 1

Install a 2" x 1" batten to the roof perimeter, level with roof deck.

[Shop EPDM Edge Trims](#)



Step 2

Once the membrane is installed, push down on the edge trim.




Step 3

Fix in place using the supplied polypins.



Step 4

Trim any excess rubber with a sharp blade.

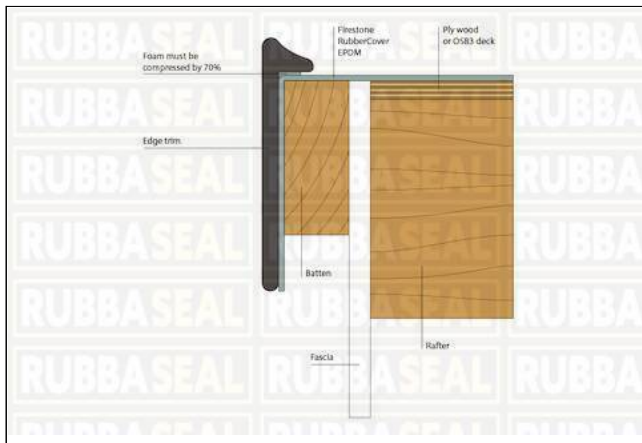

Step 5

Please allow 5mm gap between trims for expansion and contraction.