
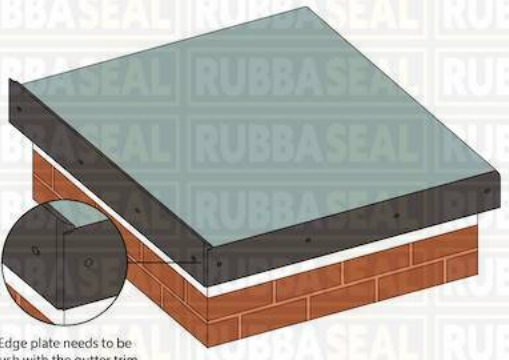




External Edge Corner

Step by step guide on installing external edge corner trims to your next EPDM Roofing project.

 <p>Drill pilot hole</p>	<p>Step 1 External corners come with 2 removable tabs. Shop Corner Edge Trims</p>
 <p>Edge plate needs to be flush with the gutter trim</p>	<p>Step 2 Neatly abut trims.</p>
	<p>Step 3 If Edge Trim meets Edge Trim then both tabs need to be removed carefully using a pair of pliers. If Edge Trim meets Gutter Trim then only one tab needs to be removed.</p>
 <p>Polynail</p>	<p>Step 4 Pushing on the corner gently, secure in place using the supplied poly nails or use our corner adhesive.</p>