
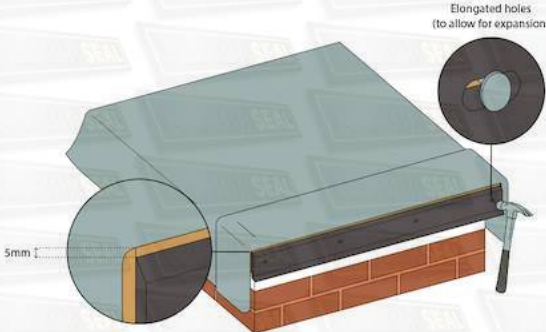

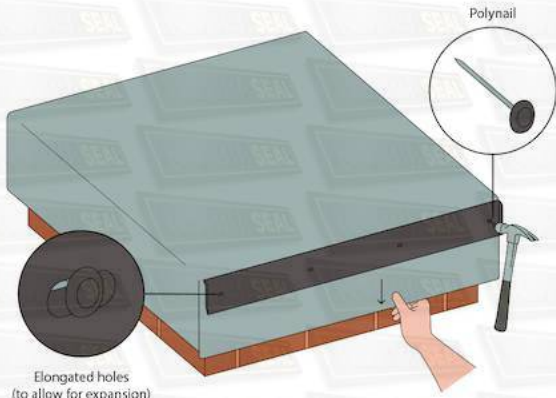
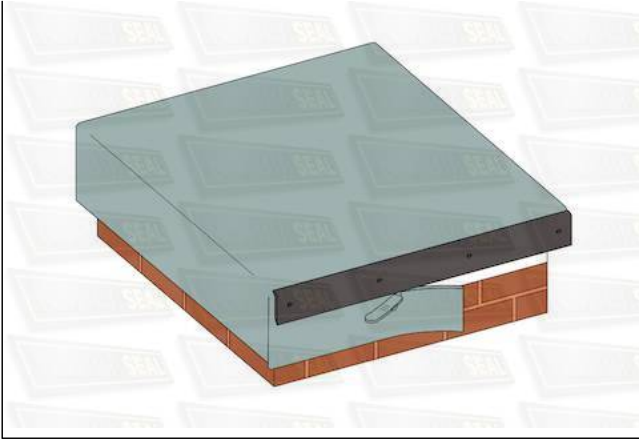


Gutter Trim

Step by step guide on installing gutter-trims to your next EPDM Roofing project.

| | |
|---|---|
|  | <p>Step 1 Install a 2" x 1" batten to the roof perimeter , level with roof deck. Shop Edge Trims</p> |
|  | <p>Step 2 Install the base plate as shown, 5mm below the deck using plain nails.</p> |
|  | <p>Step 3 Adhere membrane and dress over the base plate.</p> |
|  | <p>Step 4 Pull rubber taut and install top plate as shown, secured with polynails. Please allow a 5mm gap between trims for expansion and contraction.</p> |
| | |



Step 5

Trim any excess rubber with a sharp blade.