
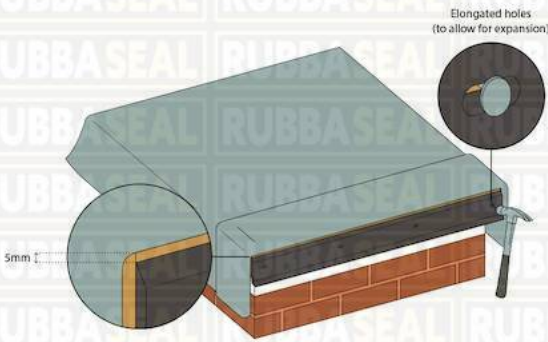




Gutter Trim

Step by step guide on installing gutter-trims to your next EPDM Roofing project.

| | |
|---|---|
|  | <p>Step 1</p> <p>Install a 2" x 1" batten to the roof perimeter , level with roof deck.</p> <p>Shop Edge Trims</p> |
|  | <p>Step 2</p> <p>Install the base plate as shown, 5mm below the deck using plain nails.</p> |
|  | <p>Step 3</p> <p>Adhere membrane and dress over the base plate.</p> |
|  | <p>Step 4</p> <p>Pull rubber taut and install top plate as shown, secured with polynails.</p> |
| | |



Trim any excess rubber with a sharp blade.



Please allow a 5mm gap between trims for expansion and contraction.