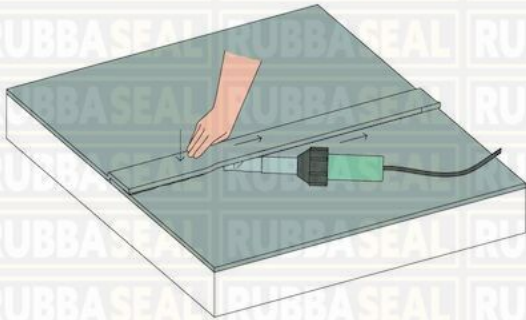
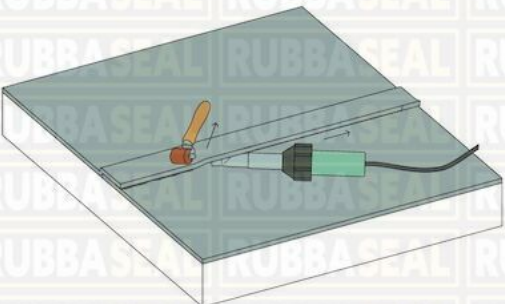


Lineflex Heat Weld

A guide to heat welding Lineflex Fleece Backed EPDM joins.

	<p>Step 1</p> <p>Form a temporary weld at the back edge of the seam using your fingers and welder. This will trap the hot air and improve the main weld.</p>
	<p>Step 2</p> <p>Seal the rubber with a hot air welder using a silicone roller at a rate of 2.5m per minute at 220 degrees (level 4)</p>