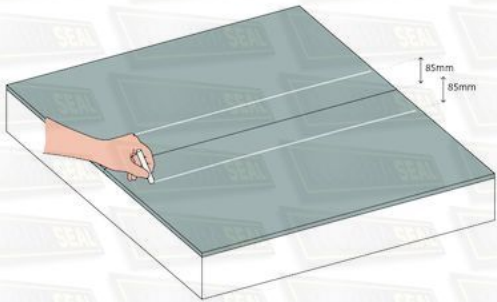

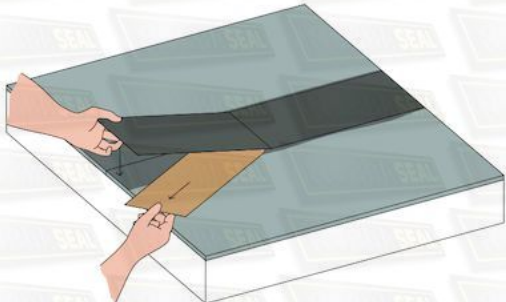



Butt Join

A guide to butting two pieces of adjoining Lineflex Fleece Backed EPDM membranes.

 <p>An illustration showing two grey EPDM membrane sheets being aligned side-by-side on a white substrate. A hand is shown marking the joint line. Two vertical arrows on the right indicate an 85mm gap between the sheets.</p>	<p>Step 1 Position the Rubber Cover sheets side by side.</p>
 <p>An illustration showing a hand applying a dark primer from a white bucket labeled 'Primer' onto the joint area of the two membrane sheets. A yellow brush is used for application.</p>	<p>Step 2 Apply primer 85mm wide onto each sheet.</p>
 <p>An illustration showing a hand peeling away a brown backing paper from a black cover tape that has been positioned along the joint between the two membrane sheets.</p>	<p>Step 3 Position cover tape along the seam area and remove the backing paper at a 45-degree angle.</p>
 <p>An illustration showing a hand using a roller to press the membrane sheets together, ensuring the cover tape is properly adhered to the joint.</p>	<p>Step 4 Thoroughly roller.</p>