

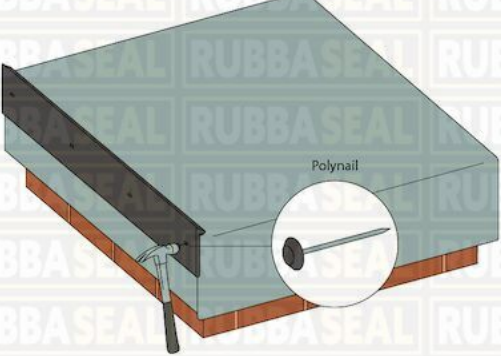

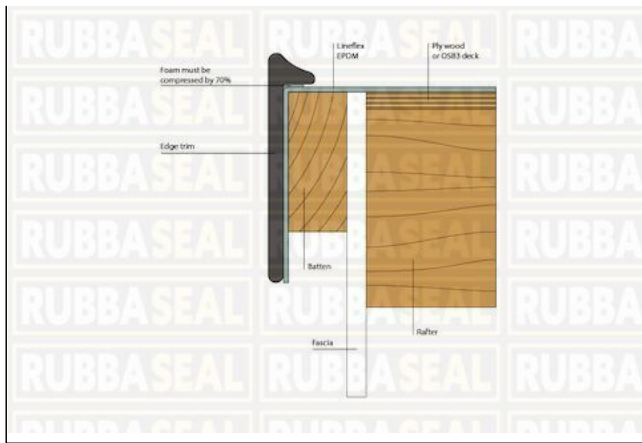


## Edge Trim

A guide to installing edge trims to a Lineflex Fleece Backed EPDM flat roof.

	<p><b>Step 1</b> Install a 2" x 1" batten to the roof perimeter, level with roof deck.</p>
	<p><b>Step 2</b> Once the membrane is installed, push down on the edge trim.</p>
	<p><b>Step 3</b> Fix in place using the supplied polypins.</p>
	<p><b>Step 4</b> Trim any excess rubber with a sharp blade.</p>



### Step 5

Please allow 5mm gap between trims for expansion and contraction.