
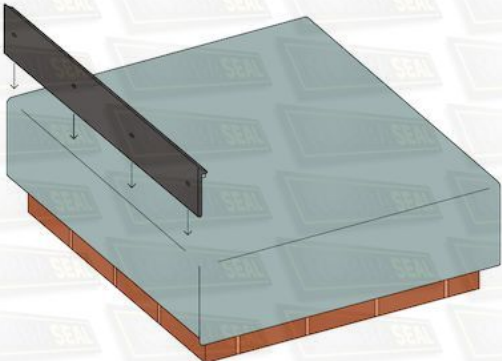





Edge Trim

A guide to installing edge trims to a Lineflex Fleece Backed EPDM flat roof.

| | |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
|  | <p>Step 1 Install a 2" x 1" batten to the roof perimeter, level with roof deck.</p> |
|  | <p>Step 2 Once the membrane is installed, push down on the edge trim.</p> |
|  | <p>Step 3 Fix in place using the supplied polypins.</p> |
|  | <p>Step 4 Trim any excess rubber with a sharp blade.</p> |
| | |

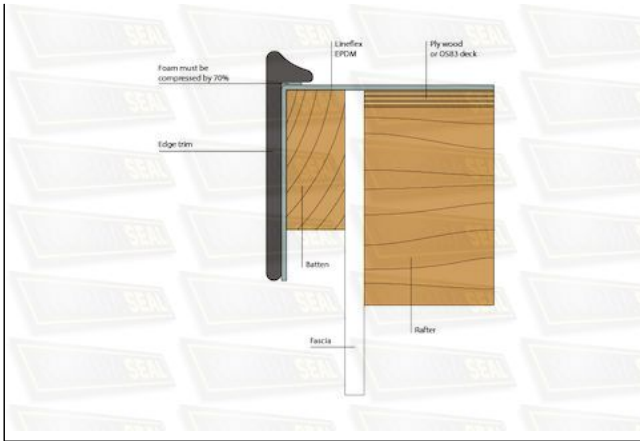

Step 5

Please allow 5mm gap between trims for expansion and contraction.