
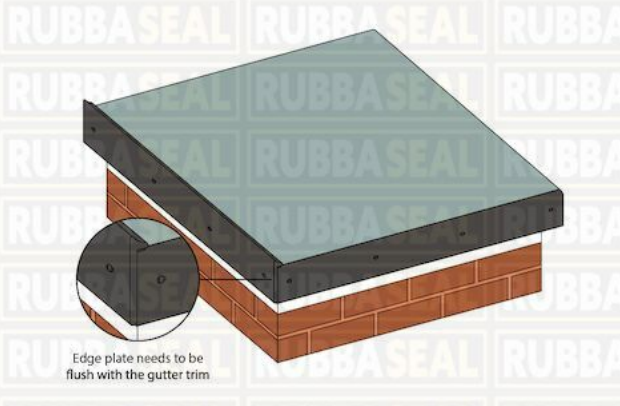




# External Edge Corner

A guide to installing an edge trim corner.

 <p>Drill pilot hole</p>	<p><b>Step 1</b></p> <p>External corners come with 2 removable tabs.</p>
 <p>Edge plate needs to be flush with the gutter trim</p>	<p><b>Step 2</b></p> <p>Neatly abut trims.</p>
	<p><b>Step 3</b></p> <p>If Edge Trim meets Edge Trim then both tabs need to be removed carefully using a pair of pliers. If Edge Trim meets Gutter Trim then only one tab needs to be removed.</p>
 <p>Polynail</p>	<p><b>Step 4</b></p> <p>Pushing on the corner gently, secure in place using the supplied poly nails or use our corner adhesive.</p>