
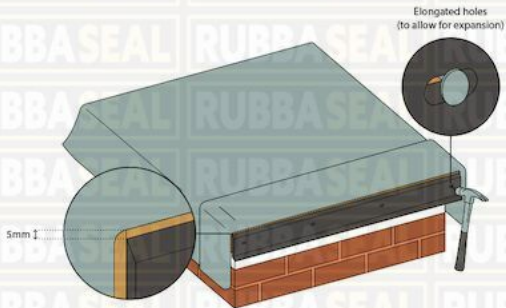

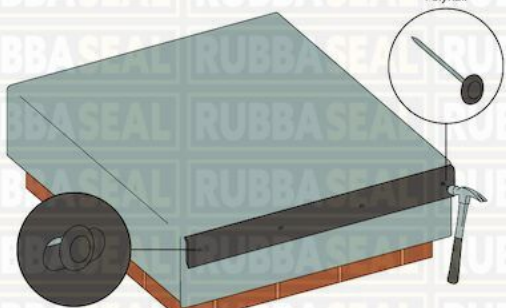


Gutter Trim

A guide to installing gutter trims to a Lineflex Fleece Backed EPDM flat roof.

	<p>Step 1</p> <p>Install a 2" x 1" batten to the roof perimeter, level with roof deck.</p>
	<p>Step 2</p> <p>Install the base plate as shown, 5mm below the deck using plain nails.</p>
	<p>Step 3</p> <p>Adhere membrane and dress over the base plate.</p>
	<p>Step 4</p> <p>Pull rubber taut and install top plate as shown, secured with polynails. Please allow a 5mm gap between trims for expansion and contraction.</p>

**Step 5**

Trim any excess rubber with a sharp blade.