
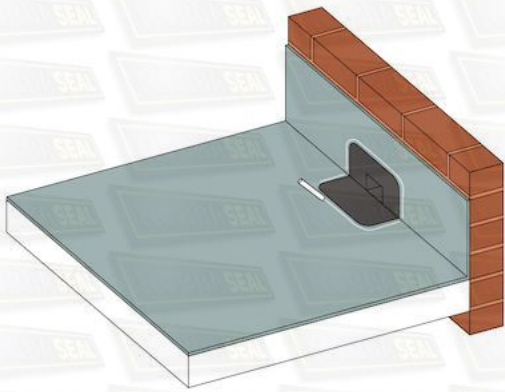
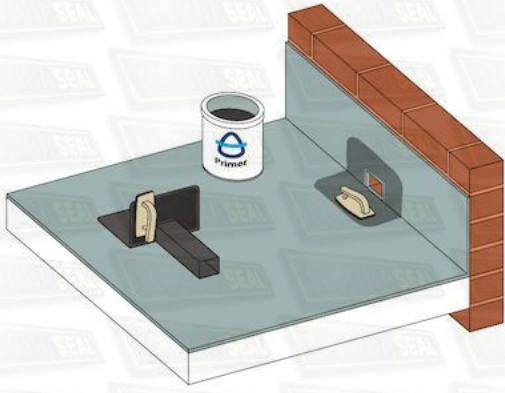
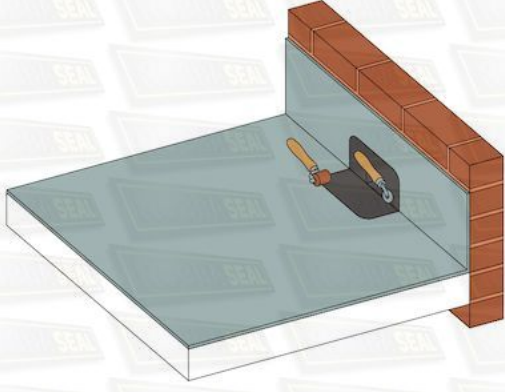
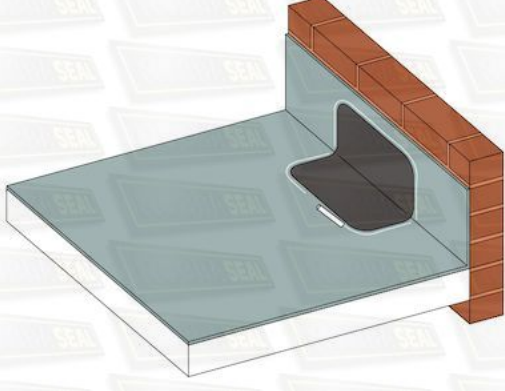


# Horizontal Rainwater Outlet


A guide to installing a horizontal rainwater outlet.

	<p><b>Step 1</b> Place the outlet through the wall and mark around it using a crayon or similar, allowing an additional 1cm around the perimeter.</p>
	<p><b>Step 2</b> Stir thoroughly and prime the underside of the outlet and the marked area on the rubber using a quick scrubber pad and handle. Allow both surfaces to dry.</p>
	<p><b>Step 3</b> Mate the outlet to the rubber and seal in place using a penny and silicone roller.</p>
	<p><b>Step 4</b> Round the corners of the 18" SA flashing (outlet kit) with scissors and neatly position over outlet. Mark the perimeter with crayon.</p>

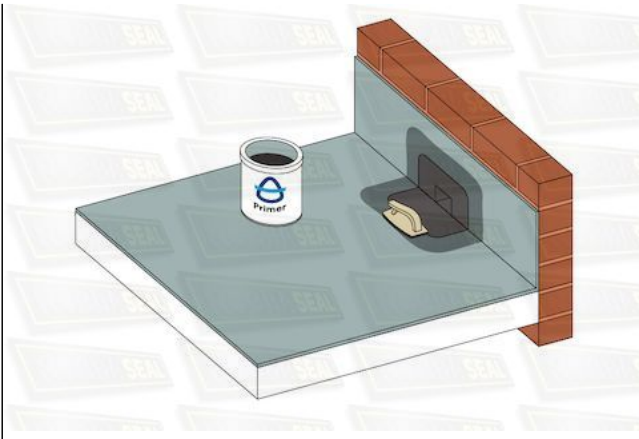

### Step 5

Prime the rubber and outlet using the QuickScrubber pad and handle and extend primer beyond the crayon line by 2cm and into the mouth of the outlet by 100mm.

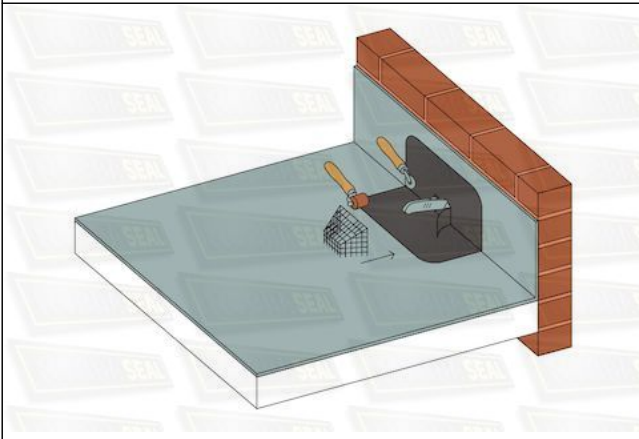

### Step 6

Once touch dry, working from the bottom, position the 18" SA flashing and carefully remove the backing paper. Ensure it is tightly sealed into the corners and use a penny and silicone roller. Carefully cut the sides and top at the aperture and allow the flap to drop into the primed outlet.