


Under Tiles


A guide to installing Lineflex Fleece Backed EPDM membrane under tiles.

 An isometric diagram showing a roof section with grey tiles and wooden battens. A wooden plank is being used to lift a tile and its batten. The tiles and battens are being moved to the right side of the roof.	<p>Step 1 Carefully remove tiles and battens and place to one side.</p>
 An isometric diagram showing the roof with a grey felt underlay. The felt is being folded up and tucked under the remaining tiles on the right side of the roof.	<p>Step 2 Fold the felt underlay up and tuck under existing tiles.</p>
 An isometric diagram showing the roof with a green rubber membrane and a wooden lay board. A small white can of contact adhesive is shown on the membrane. The adhesive is being applied to the membrane and the lay board.	<p>Step 3 Apply a thin coat of contact adhesive to the rubber membrane and lay board.</p>
 An isometric diagram showing the roof with the grey felt underlay and the green rubber membrane. The felt is being folded up and mated to the rubber membrane, starting from the bottom and working up the slope.	<p>Step 4 Allow both surfaces to dry and, starting from the bottom, mate together, working the rubber into any angle changes.</p>

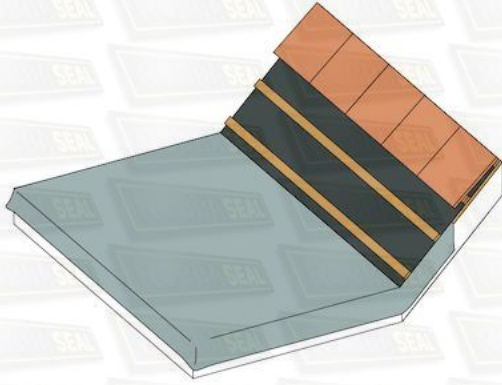

Step 5

Reinstate the felt underlay and battens over the rubber.

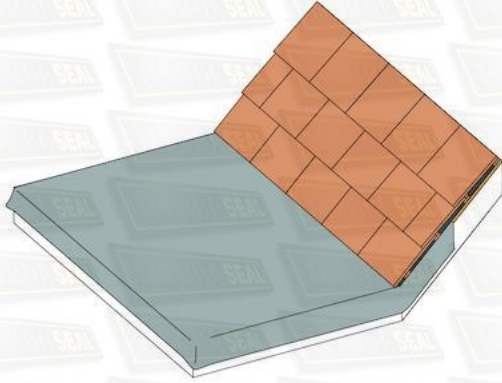

Step 6

Reinstall the tiles.