
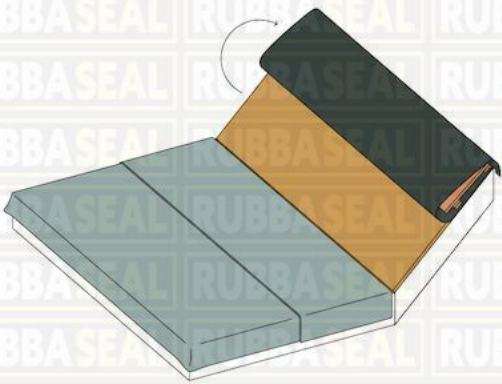
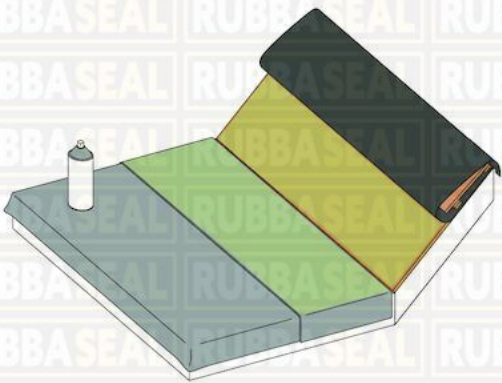



Under Tiles


A guide to installing Lineflex Fleece Backed EPDM membrane under tiles.

 A 3D perspective diagram showing a roof section. A wooden batten is being lifted away from a row of brown tiles. Below the tiles is a dark grey felt underlay. The tiles and batten are being moved to the right side of the roof.	<p>Step 1 Carefully remove tiles and battens and place to one side.</p>
 A 3D perspective diagram showing the roof section. The dark grey felt underlay is being folded up and tucked under the edge of the roof. A curved arrow indicates the direction of the fold.	<p>Step 2 Fold the felt underlay up and tuck under existing tiles.</p>
 A 3D perspective diagram showing the roof section. A green rubber membrane is being applied to the surface. A small white bottle of contact adhesive is shown on the left, with a thin line of adhesive being applied to the membrane. The dark grey felt underlay is visible on the right side, tucked under the roof edge.	<p>Step 3 Apply a thin coat of contact adhesive to the rubber membrane and lay board.</p>
 A 3D perspective diagram showing the roof section. The green rubber membrane is being pressed against the dark grey felt underlay. A curved arrow indicates the direction of the press, starting from the bottom and working up the slope.	<p>Step 4 Allow both surfaces to dry and, starting from the bottom, mate together, working the rubber into any angle changes.</p>



Step 5

Reinstate the felt underlay and battens over the rubber.

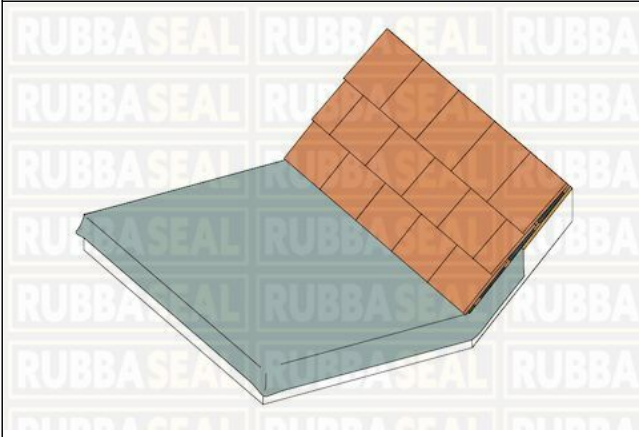

Step 6

Reinstall the tiles.