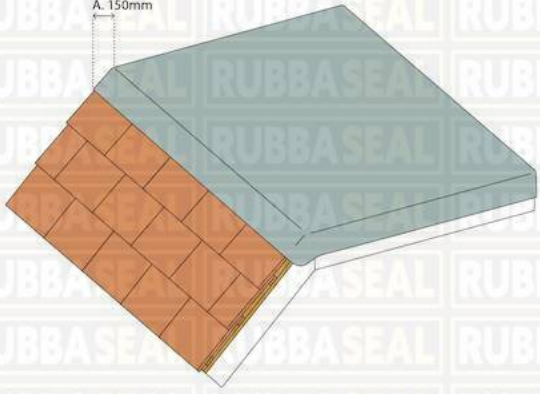

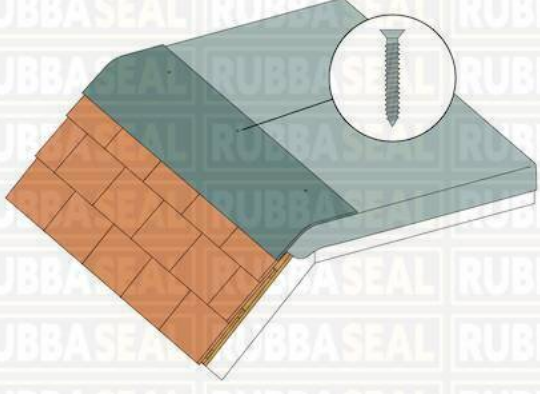
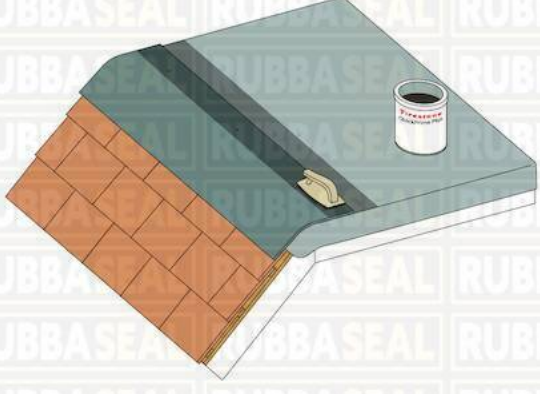


Onto Tiles

Step by step guide on installation EPDM membrane onto tiles. Installation videos & step-by-step guides for full installation available.

 A 3D perspective diagram showing a grey EPDM membrane being laid over a roof of orange tiles. The membrane extends beyond the edge of the tiles. A dimension line indicates an overhang of 'A. 150mm'.	<p>Step 1 Allow 150mm overhang onto tiles.</p>
 A 3D perspective diagram showing a dark grey lead flashing being installed over the EPDM membrane. The flashing is bent to fit over the edge of the tiles and the membrane.	<p>Step 2 Dress lead into place 6" onto tiles, 3" onto the deck. We recommend using minimum 9" Code 4 lead cut into 1200mm lengths max.</p>
 A 3D perspective diagram showing a screw being used to secure the lead flashing. A circular inset shows a close-up of the screw being driven into the lead.	<p>Step 3 Fix into position using screws.</p>
 A 3D perspective diagram showing a yellow brush applying a dark liquid (Quick Prime plus) to the lead flashing and the EPDM membrane. A small white container of the product is shown next to the brush.	<p>Step 4 Apply Quick Prime plus to lead and rubber approx. 160mm wide using Quickscriber pad and handle. Allow to go touch dry.</p>

**Step 5**

Centralize the 6" batten cover strip and carefully remove release paper applying downward pressure. Use silicone roller to seal.