



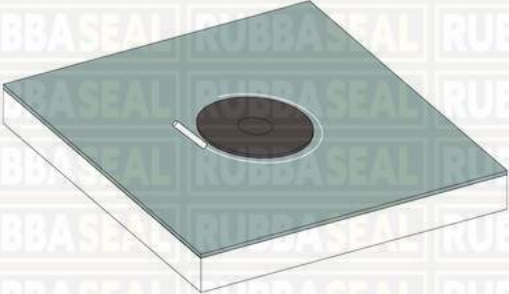


Rainwater Outlet


Step by step guide on installing a rainwater outlet into your next EPDM project.

	<p>Step 1</p> <p>Place rainwater outlet through the pre-cut hole and mark around it using a crayon or similar.</p> <p>Shop EPDM Drain Outlets</p>
	<p>Step 2</p> <p>Prime the underside of the rainwater outlet and 1cm beyond the marked area on the rubber using a quick scrubber pad and handle. Allow both surfaces to dry.</p>
	<p>Step 3</p> <p>Mate the surfaces together and compress with silicone roller.</p>
	<p>Step 4</p> <p>Round the corners of the 12" formflash (Rainwater flashing kit) with scissors and neatly position over outlet. Mark the perimeter with crayon.</p>



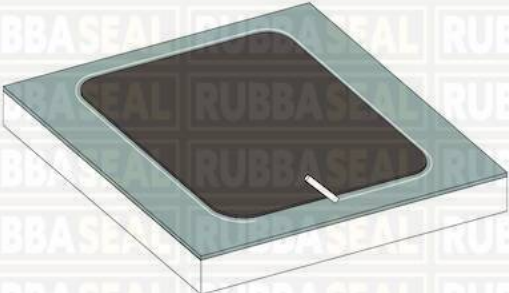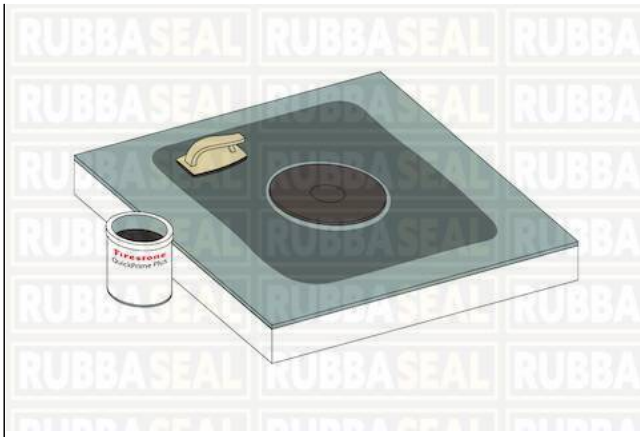Step 5

Prime the rubber and outlet using the quick scrubber pad and handle and extend primer beyond the crayon line by 2cm.

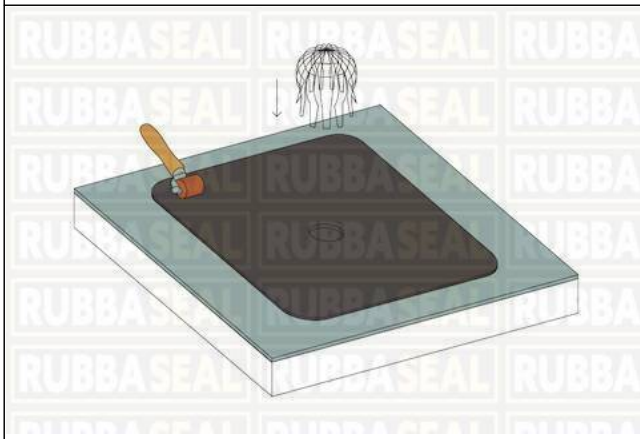

Step 6

Once touch dry, neatly position the 12" formflash and carefully remove the backing paper. Roller firmly in place and use a sharp blade to carefully cut out the hole.