
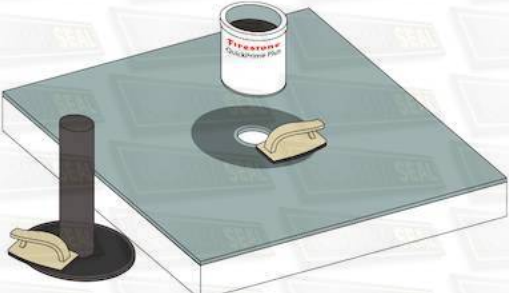
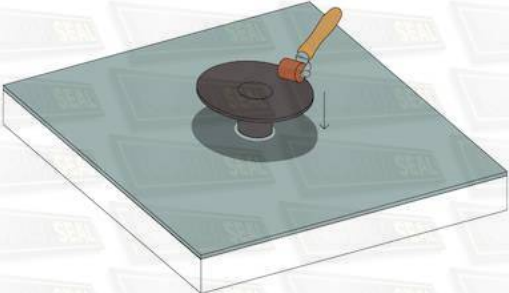



# Rainwater Outlet


Step by step guide on installing a rainwater outlet into your next EPDM project.

	<p><b>Step 1</b> Place rainwater outlet through the pre-cut hole and mark around it using a crayon or similar.</p> <p><a href="#">Shop EPDM Drain Outlets</a></p>
	<p><b>Step 2</b> Prime the underside of the rainwater outlet and 1cm beyond the marked area on the rubber using a quick scrubber pad and handle. Allow both surfaces to dry.</p>
	<p><b>Step 3</b> Mate the surfaces together and compress with silicone roller.</p>
	<p><b>Step 4</b> Round the corners of the 12" formflash (Rainwater flashing kit) with scissors and neatly position over outlet. Mark the perimeter with crayon.</p>



### Step 5

Prime the rubber and outlet using the quick scrubber pad and handle and extend primer beyond the crayon line by 2cm.

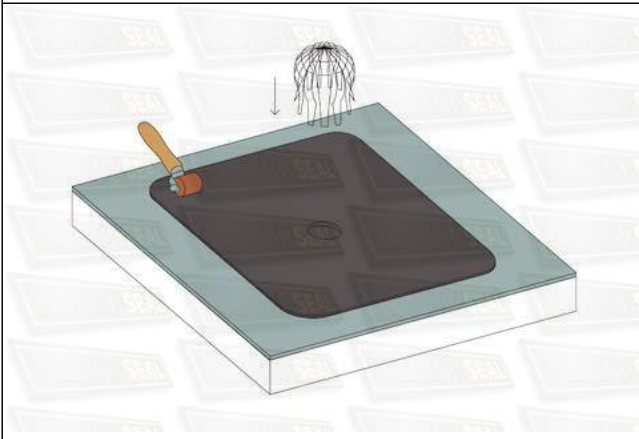

### Step 6

Once touch dry, neatly position the 12" formflash and carefully remove the backing paper. Roller firmly in place and use a sharp blade to carefully cut out the hole.