

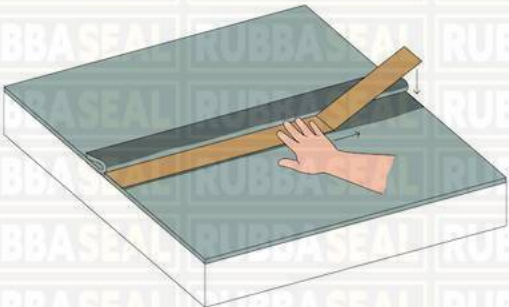
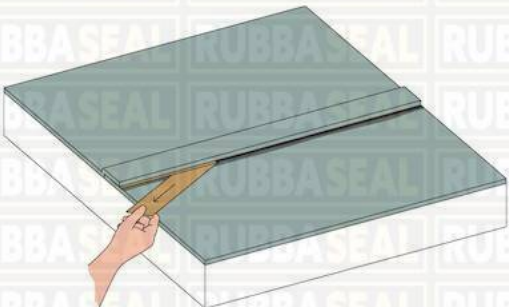
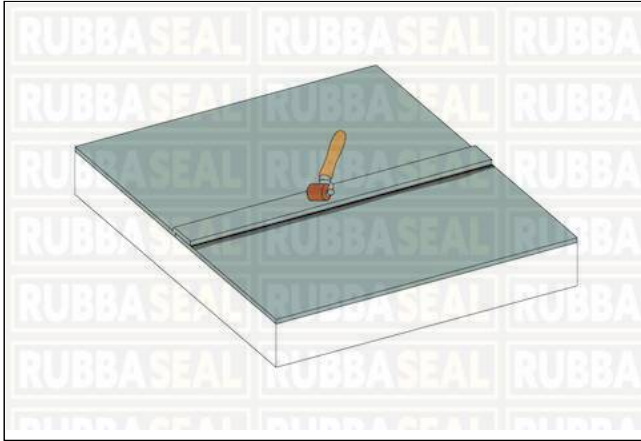


Seam / Join

Step by step guide on creating a seam join after splicing two or more pieces of Techno EPDM membrane.

	<p>Step 1</p> <p>Ensure rubber is straight and overlapping by 10cm, create a line 2cm away from the joint using a crayon or similar. Position your thumb between the crayon and joint as a good guide.</p> <p>Shop EPDM Membranes</p>
	<p>Step 2</p> <p>Fold the rubber back and prime both sides and up to the crayon line using quick scrubber pad and handle. Allow both surfaces to dry.</p>
	<p>Step 3</p> <p>Starting at one end, carefully apply 3" quick seam tape to the lower primed area, ensuring the brown paper is in line with the crayon line, once the full length has been applied roller using a silicone roller.</p> <p>Shop Flashings & Seam Tapes</p>
	<p>Step 4</p> <p>Overlap the rubber onto the brown release paper and slowly remove the release paper at a shallow angle, smoothing in place with your hand as you go.</p>

**Step 5**

Once removed, thoroughly roller.